



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Rear Splash Guard Kit

2. **APPLICATION:** 370Z

3. **PART NUMBER:** 999J2 ZVxxx04

4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard - Rear Right	---
B	1	Splash Guard - Rear Left	---
C	6	Screw	14-51 00841
D	2	Spring Clip (Large)	12-41 0017U
E	4	Spring Clip (Small)	12-41 0015U
F	1	Installation Instructions Replacement Template	999V2 AW000

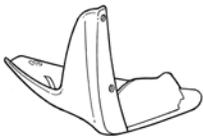


A



B



C



D



E



F

5. **TOOLS REQUIRED:**


- clean, lint-free wiping cloth
- isopropyl alcohol (minimum 99% concentration)
- #2 angled phillips screwdriver
- awl
- drill
- 6mm (1/4") drill bit
- 10mm socket and driver

6. **PRE-INSTALLATION NOTES:**

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


7. INSTALLATION PROCEDURE:

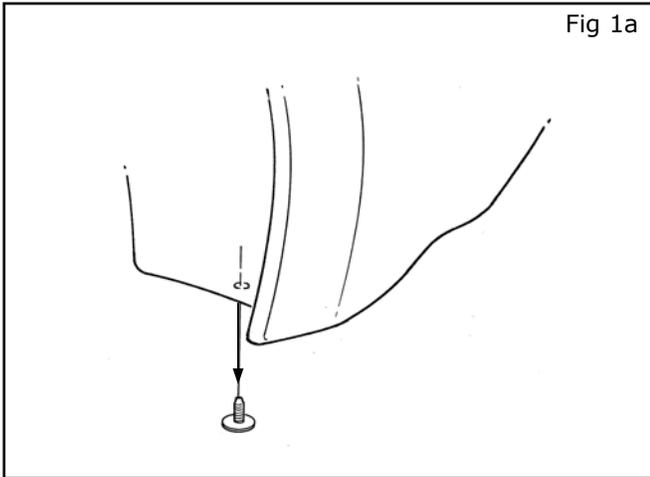


- 1) Position rear splash guard.
 - a) Remove underside bolt (Do Not Discard).
 - b) Clean area where tape will be located using isopropyl alcohol (**ENSURE SURFACE IS DRY BEFORE PROCEEDING**).

NOTE:

Part and vehicle temperature must be 61 °F - 86 °F (16 °C - 31 °C).

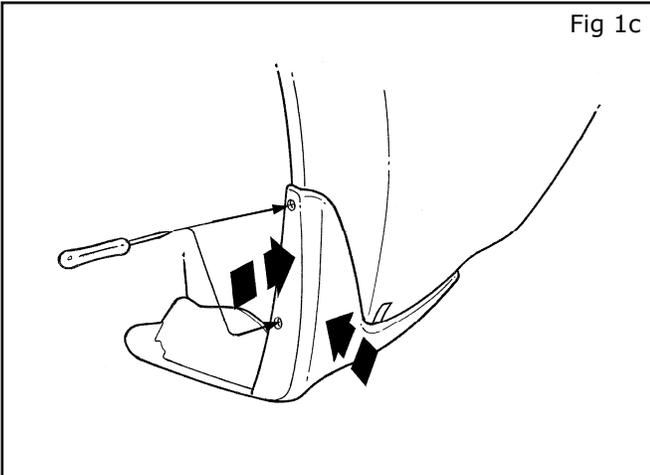


- c) Align splash guard to vehicle.
 - d) Mark center hole locations with an awl.

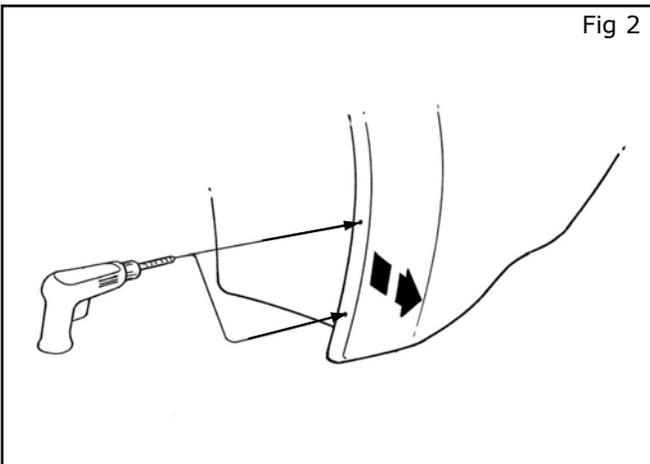

- 2) Drill Holes.
 - a) Remove splashguard.
 - b) Pull out on fascia edge drill 2 6mm (1/4") holes in marked locations.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

Fig 3

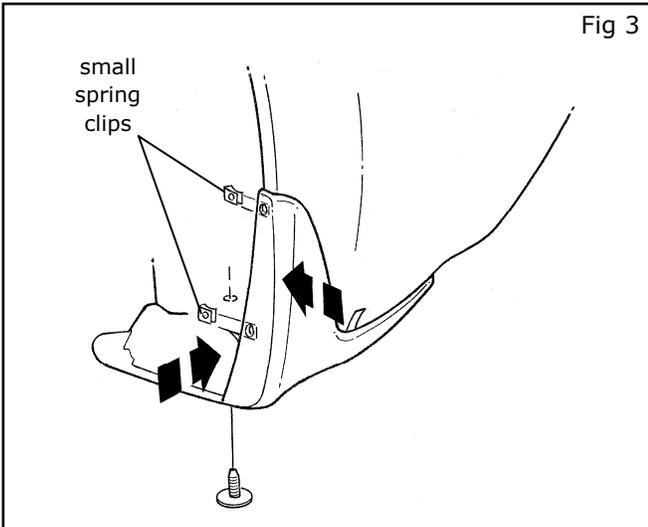

- 3) Install spring clips.
 - a) Install (2) small spring clips on fascia edge holes.

NOTE:

INSTALL SPRING CLIP WITH FLAT EDGE ON OUTSIDE FASCIA.


- b) Reposition splashguard.

NOTE:

MAKE SURE TAPE TAB IS EXPOSED.

- c) Loosely install underside bolt.

Fig 4a

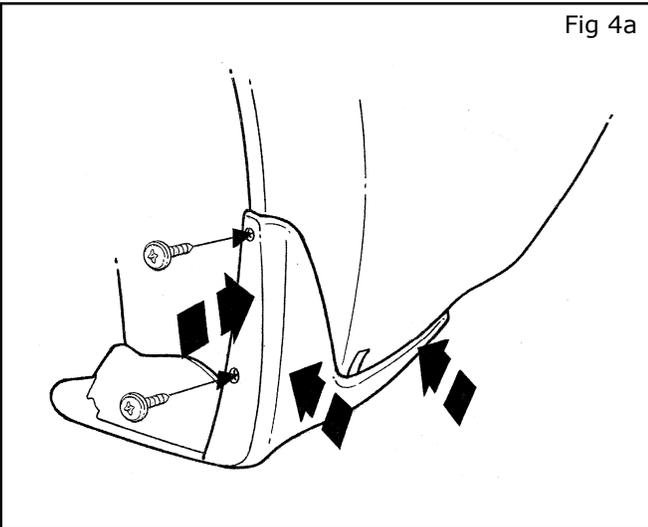

- 4) Install screws.
 - a) Push inward and upward.
 - b) Install lower screw.
 - c) Install upper screw.

NOTE:


HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS .

- d) Pull tape liner off using tab.
 - e) Push upward and inward along tape length from front to rear

NOTE:

APPLY 20 - 30 POUNDS OF PRESSURE ON TAPE LENGTH TO ENSURE CONTACT.


Fig 4f

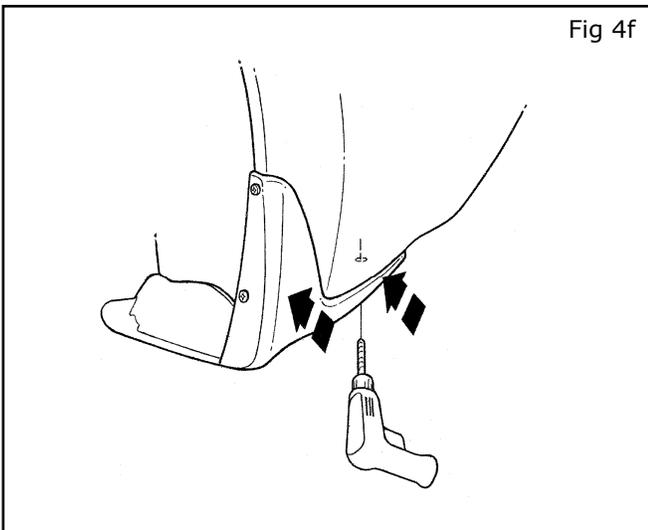

- f) Push inward and upward.
 - g) Drill 6mm (1/4") hole.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

Fig 4h

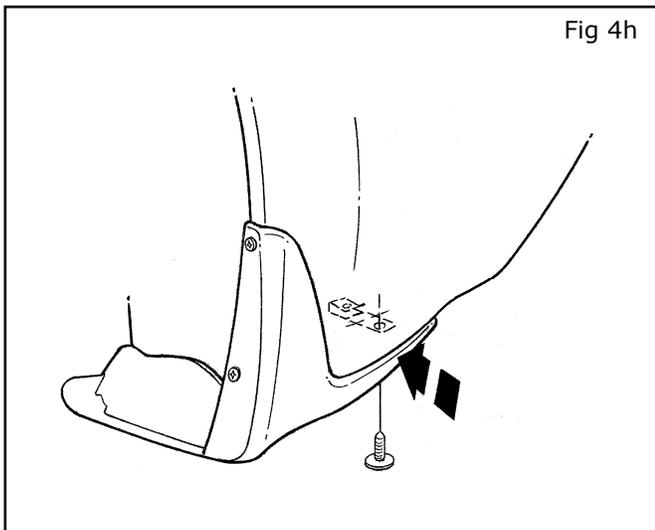

- h) Install large spring clip and underside screw.
- i) Hold upward and inward while tightening screw.
- j) Fully tighten underside bolt.